 




connex

10.1" Mediatek Quad Core Calling Tablet

INSTRUCTION MANUAL

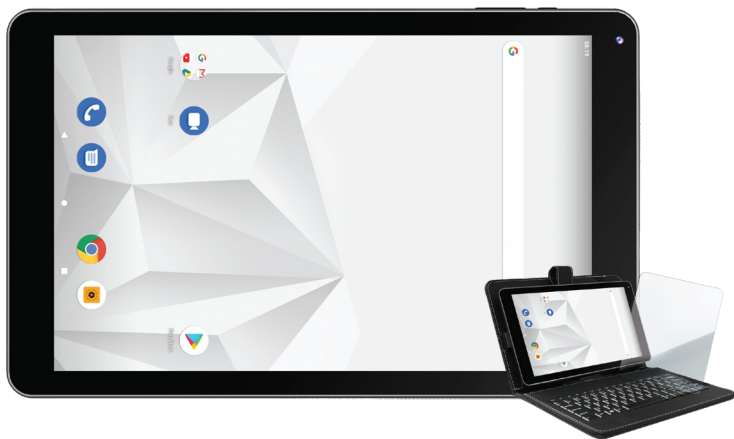

CONNEX CTAB1044hn

Please read and retain these instructions for future use.



CTAB1044hn


I. Safety Precautions:

1. Please note that this is an advanced technological device with sensitive components. Avoid dropping the tablet. Avoid rough handling to prevent damage.
2. To avoid short-circuiting your device, do not allow it to come into contact with metal objects. To avoid losing important data, we recommend backing up your device regularly, especially before you upgrade the firmware or install new applications. The manufacturer and / or distributor do not take responsibility for loss of data while using this device.
3. Do not disassemble.
4. Do not wipe the surface of the unit with alcohol, thinners or benzene, as this may damage the finish or screen of the unit.
5. Do not disconnect the unit while it is formatting or uploading / downloading, as this may lead to software errors.
6. Please operate this device strictly as per the user guide.
7. Do not allow your tablet to come into contact with water, or insert foreign objects into the unit.
8. Do not use the unit in places that are extremely hot, cold, dusty, or humid.
9. Specifications are subject to change and improvement without notice.

Note: The pictures shown in the manual are for reference only. The design and the specification of the unit are subject to change without notice.

II. Description of parts:

- | | |
|-------------------------|----------------|
| 1. Micro USB Input | 6. Reset |
| 2. Aux Headphone Socket | 7. Rear Camera |
| 3. Front Camera | 8. Microphone |
| 4. Power Button | 9. Speaker |
| 5. Vol + / Vol - | |

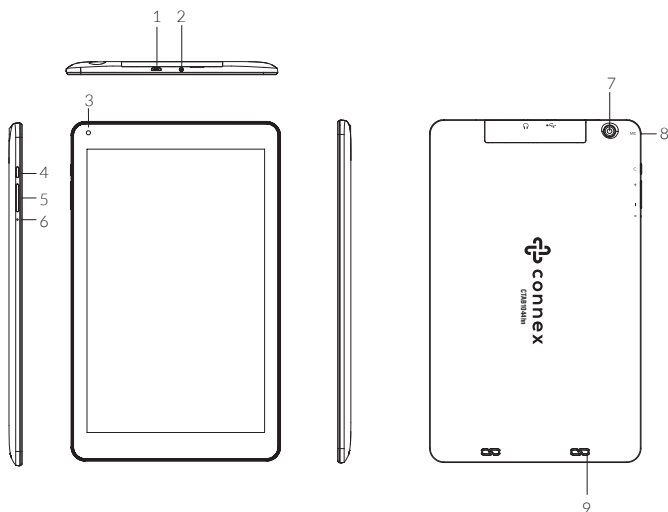

III. Operation Instructions

1. Basic Functions

1.1 SIM Card Installation

Place the tablet on a flat surface. Ensure the tablet is switched off, insert the SIM card into the SIM card slot in the direction indicated.

1.2 Power on / Power off

Power on:

Press and hold the power button for 5 seconds; the unit displays the start-up logo and enters the home screen mode after a short time.

Power off:

Press and hold the power switch for 3 seconds, then tap Power Off to turn the unit off.

Sleep Mode:

While the device is on, briefly pressing the power switch will enter into Sleep Mode, and your screen will turn off. Any applications you had running, will continue to run in the background. Resume use by briefly pressing the power button again. You may use this function when not using the device for a short time, to save power.

1.3 Charging

When the device prompts low battery, please charge it using the provided charging cable.


1.4 Main Menu

Swipe up on the touch panel in the main interface and all your installed applications will be displayed. Swiping to the next screen will display additional applications. Applications include the system settings, music player, video player, web browser and many other applications which were installed on your tablet, plus any new ones you have installed.

2. Settings


Click the  icon in the main interface to enter the settings interface.

Click the corresponding setting items to change settings to customize the device to your personal preferences.

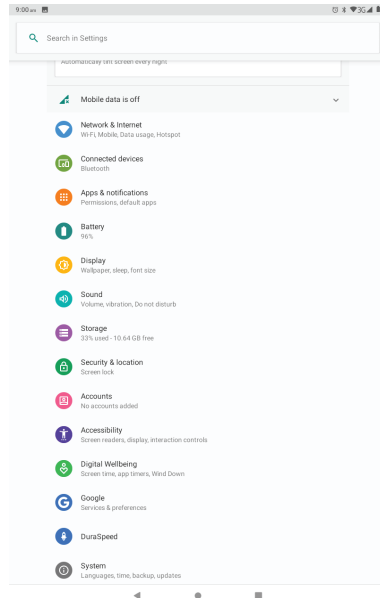


2.1 Date and Time Settings

Click the “Date & Time” option in the settings interface to set the date and time. You may set the date, time zone, time, time format and date format, etc. in the menu.

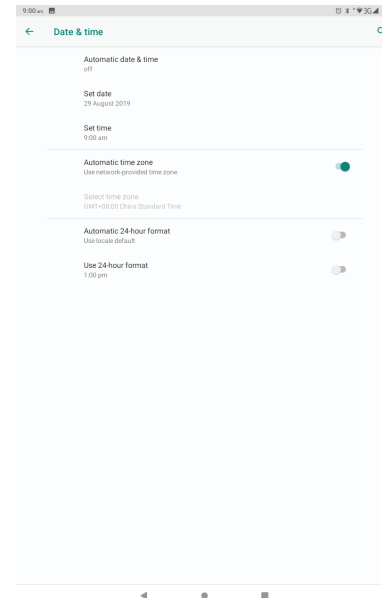


2.2 Brightness

Select the “Display” option in the settings interface. Click “Brightness” to enter the menu, and slide the bar to adjust the brightness. A lower brightness setting will allow for a slightly longer battery usage time.

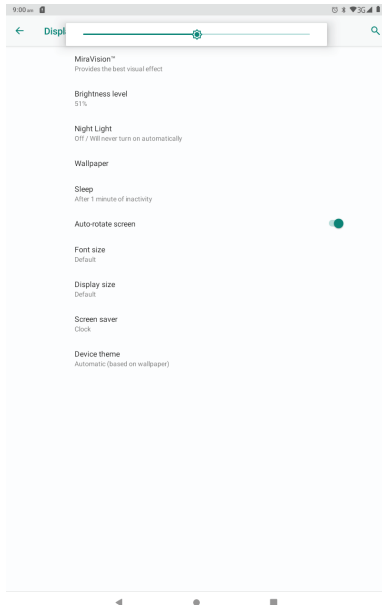


3. WiFi Connection

Under the settings menu click “Network & Internet” and then click “Wi-Fi” to set and manage wireless access. A list of nearby available Wi-Fi networks will be displayed. Click the name of the network you wish to connect to and the settings window will display. Connect to the Wi-Fi network of your choosing by following the prompts on the screen. You may be asked to input a user name and password if the networks are encrypted or protected.

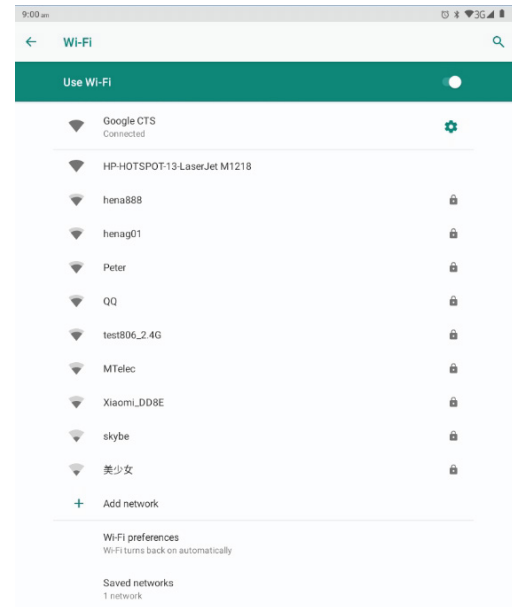


4. Bluetooth

Under the settings menu click “Connected Devices” to set and manage Bluetooth devices.

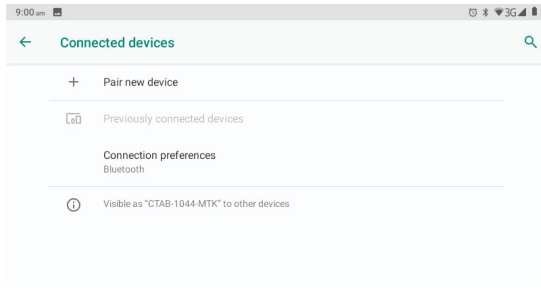

Click “Pair new device”. A list of available nearby Bluetooth devices will show. Click the name of the device you wish to pair with. Select device pairing using any pairing code which was supplied with the Bluetooth device. After a few seconds, the tablet will notify you that the devices are paired. You can now transfer pictures, movies, music, etc. with the Bluetooth device.

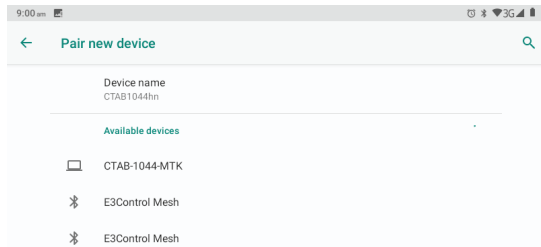

5. Install, Uninstall and Run Applications

5.1 Install

There are many ways to install applications under Android™. The recommended method is using Google™ Play. To access Google Play, simply click on the Google Play icon  and then search for your selected application and follow the prompts to install it.

Note: You will require a Google account to access Google Play.

Note: You can also install programs using the OTG function of the tablet, but the manufacturer / distributor of this tablet accepts no responsibility for software errors using this method.

5.2 Uninstall

To uninstall an application, click “Apps & Notifications” under Settings and select the application you wish to uninstall. Click on the Uninstall button to uninstall the application.

6. Browsing the internet


6.1 Ensure you are connected to a network and select the Browser application. When the browser opens, type the web address of the site you want to visit and the browser will navigate to that site.

6.2 Click the  icon to enter bookmark view to see the browser history. Click the web page you want to open. To save a web page into a bookmark, you may click the  icon to enter and click “Add” to save it.

7. Audio and video playback


7.1. Audio playback

Select the Music application in the main menu to enter the audio playback interface. It will list all the audio files in the device, and you may click the file name to play it. In the audio playing interface, click the relevant icons to PLAY/ PAUSE, etc.

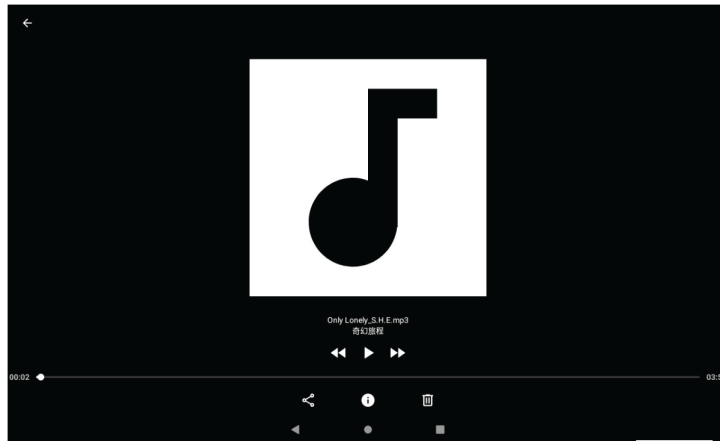



7.2. Video Playback

Click the Gallery application in the main menu to view a list of all your photos and videos. Click on the file name or thumbnail to view it. While the video is playing, touch the screen to open the playback icons and click the relevant icon to Play / Pause / Adjust Volume / Skip files, etc.

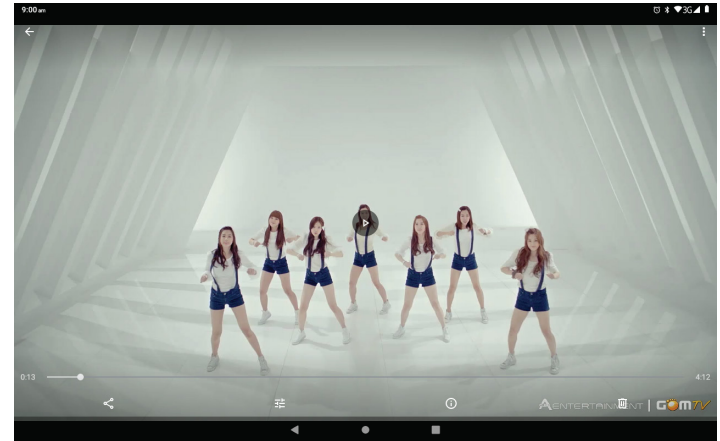

8. Picture Viewing

Click the Gallery application in the main menu to view a list of all your photos and videos. Click on the file name or thumbnail picture to view it. Touch the screen to open the operation icons while viewing the picture to Zoom in / Zoom out / Skip to next picture / Delete the picture, etc.

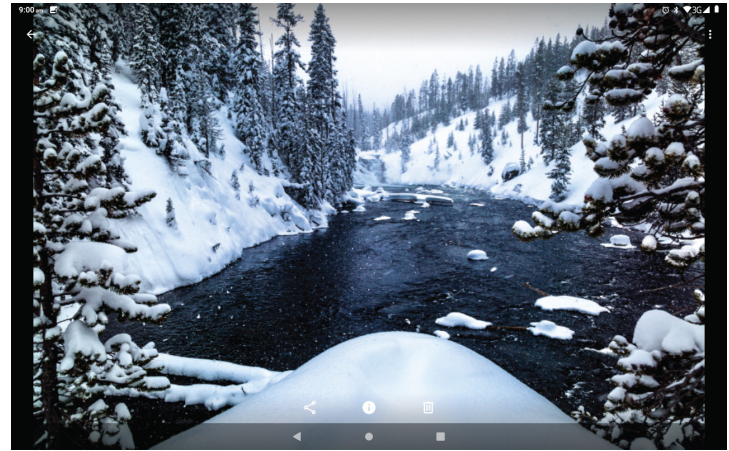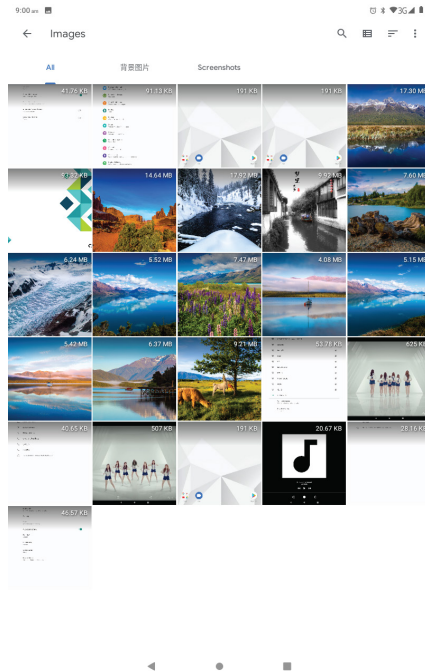

9. Camera

Click Camera in the main interface.

9.1 Camera

Click the  icon to take the picture.

Click the  icon to set the Scene Mode, Picture size, Picture quality, and color effect.

Click the  icon to select the rear or front camera.

9.2 Video

Click the  icon to take video.

Click the  icon to set the color effect or restore to default settings.

10. 3G calling

To use the tablet for 3G calling, please ensure that you have a valid SIM card installed with available airtime.

10.1 Phone

Place the tablet on a flat surface. Ensure the tablet is switched off, open the bottom shell, and insert the SIM card into the SIM card slot in the direction indicated.

Turn on the device. The 3G network signal icon  will show after entering the system. Click the  icon to enter the "phone" function.

There are 3 options:

1. Phone: Enter the phone number you wish to call and then click the  icon to dial.
2. Call log: Check the call history in the call list and dial the number again.
3. Contacts: Click the name of the contact to dial.

10.2 Contacts

Click the  icon to enter the Contacts function. Click the  icon to add an account, Click the  icon to pop up options to Delete contacts, Contacts to display, Import/Export, Groups, Accounts, Settings, Share visible contacts. You may make the corresponding selections based on your requirements.

10.3 Messaging

Click the  icon to enter the Messaging function, click the  icon to create a new message, click the  icon to Search messaging. Click the  icon to enter the settings menu. You may make the corresponding selections based on your requirements.

10.4 3G Data Network

To use the tablet for 3G Data, please ensure that you have a valid SIM card installed with Data available. Place the tablet on a flat surface. Ensure the tablet is switched off, open the bottom shell, and insert the SIM card into the SIM card slot in the direction indicated. The 2G / 3G network signal icon  will show after entering the system. Since you can only choose either 2G / 3G or Wi-Fi, you must turn off Wi-Fi first. Select Settings "Network & Internet" Mobile networks to setup your 3G Data Network.


11. Connecting to an External Device

11.1. Connect with PC

Connect the device to a computer via the USB cable. Your computer will detect the tablet and you will be able to browse your files in the My Computer menu of your computer.

11.2. Using an OTG or SD Card


This tablet supports removable devices with FAT32 formats, such as a USB flash drive. Connect the USB flash drive to the tablet using the supplied OTG cable. Your tablet will recognize the USB flash drive and a menu will open allowing you to browse the files on the USB flash drive.

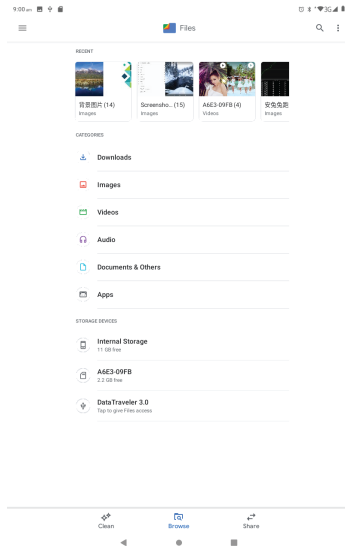

The OTG function will also allow the connection of a USB mouse or keyboard to the tablet. Your tablet can support an additional Micro SD card with a capacity of up to 64 GB. To insert the card, please first ensure the tablet is switched off and on a flat surface. Insert the Micro SD card into the slot. When turning on the tablet after insertion of the Micro SD card, the tablet will recognize it and it will be available for use. To view what is on the Micro SD card, you can use the File Manager application.

12. GPS

Click Settings in the main interface and click Location to enter the Location Access Setting interface. Allow the tablet to use the GPS for Location Services.

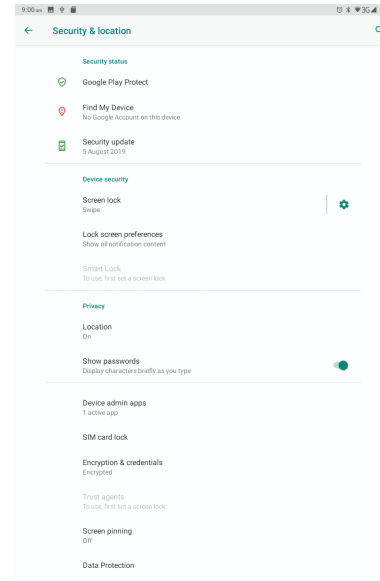

Specifications

Operating System:	Android 9.0
Processor:	Mediatek Quad Core MT8321 1.3 GHz
GPU:	Mali-400 MP4 OpenGL
Flash:	16 GB
Memory:	DDR 2 GB
TF Card Slot:	Micro SD card (Max: 64 GB)
Screen:	10.1 Inch 16:9 800 X 1280 IPS 5-point touch capacitive screen
Languages Supported:	Chinese, English, Japanese, Cestina, Dansk, Deutsch, English, Espanol, Francais, Italiano, Nederlands, Norsk, Bokmal, Polski, Portugues, Svenska, Turkce, Errnvlka, Pyccknn, etc
Input Method:	Google Pinyin input method, soft keyboard, handwriting input
Supported Audio Formats:	MP3, WMA, MP3, OGG, AAC, M4A, MA4, FLAC, APE, 3 GP, WAV
Input:	Microphone
Output:	Built-in dual speaker 8 Ω / 1 W x 2
Supported Video Formats:	AVI (H.264, DIVX, DIVX, XVID, RM, RMVB, MKV (H.264, DIVX, DIVX, XVID), WMV, MOV, MP4 (H.264, MPEG, DIVX, XVID), MPEG, MPG, FLV (H.263, H.264)
Video Source:	Supports 30 FPS full 1080 p HD format video playback
Supported Image Formats:	JPG, JPEG, GIF, BMP, PNG
Supported E-book Formats:	TXT, EPUB, PDF, WORD, EXCEL,

Camera:	POWERPOINT, LRC, HTML, HTM, EPUG, FB2 Front: 2 MP, Rear: 5 MP Supports photo, video and panoramic modes
Power Supply:	Travel charger Input: AC 100 – 240 V, Output: DC 5 V / 2 A
Battery:	Lithium Battery, 6000 mAh, 3.7 V
GPS Receiver:	Supports 3 D Map
Software:	Software: Browser, Flash (10.3), APK install tools, Instant messaging, Online communication, Email, Mediaplayer, PDF viewer, Games, Picture and Image sharing, Map, Calculator.
2G / 3G	GSM / WCDMA 900 / 2100
WiFi:	2.4 GHz
Bluetooth Distance:	≤ 10 m, Bluetooth 4.0
Ports:	Micro USB, OTG supported
Headphone:	3.5 mm stereo headphone
MIC:	High-definition voice recording
Buttons:	Power on / off, volume +, volume -
G-Sensor:	Freescale mode 3 Axis / 4 directions
Working Temperature:	0 °C ~ +45 °C
Storage Temperature:	-20 °C ~ +55 °C
Humidity:	20 % RH-90 % RH (Temperature must not exceed +65 °C when the humidity has reached to 90 % RH)
Weight:	585 g
Dimensions:	259.2 x 164 x 9.3 mm

ENVIRONMENTALLY FRIENDLY DISPOSAL

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT.

- At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.
- o Never dispose of used electronics with ordinary solid wastes, since they contain toxic substances.
- o Always dispose of used electronics in accordance with the prevailing community regulations that apply to the disposal of electronics. If there are no local regulations concerning electronics disposal, please dispose of the device in a waste bin for electronic devices.



DISCLAIMER

All product and company names are trademarks™ or registered® trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them.

Google, Android, Google Play and other marks are trademarks of Google Inc.