



E-LUMINATE

High Definition PC Projector



INSTRUCTION MANUAL

Please read and retain these instructions for future reference.



CP101

HIGHLIGHTS

- 3500 Lumens
- Up to 200" Screen Projection
- 2 x USB / 2 x HDMI / VGA / AV
- Built-in Speakers
- Good Picture Quality
- Universal Compatibility

PACKAGE CONTENTS


- Connex E-Luminate Projector
- Carry Bag
- Remote Control
- Power Cable
- HDMI Cable
- VGA Cable
- 3-in-1 AV Cable
- User Manual

SPECIFICATIONS

- Projection System: TFT LCD
- Projector Resolution: 1280 x 800, Supports 720p / 1080p
- Brightness: 3500 Lumens
- Image Flip: Up / Down / Mirror Flip
- Projection: Forward / Back Projection / Drop
- Focusing Method: Manual
- Contrast Ratio: 1500:1
- Perspective Ratio: 16:9 & 4:3
- Bulb Type: LED
- Projection Size: 50" - 200"
- Keystone Correction: $\pm 15^\circ$ Manual
- Projection Distance: 1.5 - 4 m
- Total Power: 120 W
- Input Ports: HDMI x 2 / USB x 2 / VGA / AV

IDENTIFYING PARTS

Remote Control

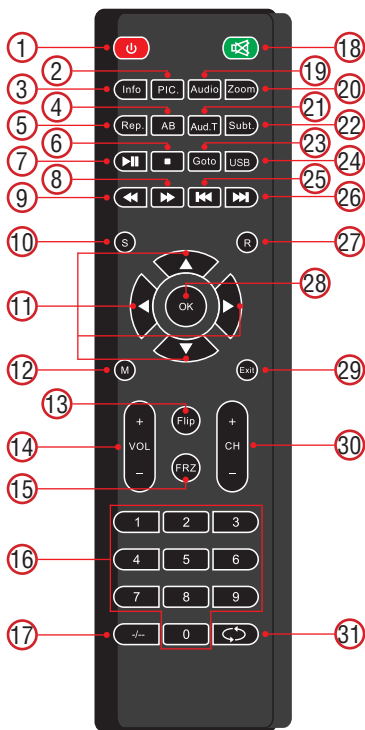

- 1 - Power On / Off
- 2 - Pic. Picture Mode
- 3 - Info Information
- 4 - AB AB Repeat
- 5 - Rep. Repeat
- 6 - Stop
- 7 - Play / Pause
- 8 - Fast Forward
- 9 - Fast Backward
- 10 - S Source
- 11 - Direction Buttons
- 12 - M Menu
- 13 - Flip Flip (360° Image)
- 14 - Vol+/- Volume Buttons
- 15 - FRZ Freeze Image
- 16 - Channel Buttons
- 17 - Channel Input
- 18 - Mute / Unmute
- 19 - Audio Audio Mode
- 20 - Zoom Zoom
- 21 - Aud.T Audio Tracks
- 22 - Subt. Subtitle
- 23 - Goto Go to Timeframe
- 24 - USB USB Mode
- 25 - Previous Track
- 26 - Next Track
- 27 - R Aspect Ratio
- 28 - OK OK / Confirm
- 29 - Exit Exit
- 30 - CH+/- Channel Buttons
- 31 - Repeat

Projector Back



Projector Top



- 1 - VGA Input
- 2 - Power Switch
- 3 - Power Input
- 4 - USB Inputs
- 5 - HDMI 1 Input
- 6 - HDMI 2 Input

- 7 - Audio (Aux)
- 8 - AV Input
- 9 - Power Button
- 10 - OK Button
- 11 - Menu Button
- 12 - Source Button

- 13 - Direction Buttons
- 14 - LED Indicator
- 15 - Lens Correction Dial
- 16 - Keystone Correction Dial

OPERATING INSTRUCTIONS

GETTING STARTED

Connect the Power Cord to the Power Input slot located on the back of the Projector, and then plug the other end of the cord into a plug outlet. The LED Indicator will light up red when power is connected to projector.



Note:

The projector is now in standby mode.

SWITCHING ON / OFF

To switch on the E-Luminate Projector, press the  power button on either the Projector or the Remote. The Projector will play a boot sequence on its screen. To switch off the E-Luminate, press the  power button on either the projector or the remote.

STANDALONE STREAMING

The Projector can be used as a standalone device to share content from a variety of devices with a wired connection or from a USB flash drive.

KEYSTONE CORRECTION / LENS FOCUS

Use the Keystone Correction Turn Dial to adjust the angle of the Projector. Use the Lens Focus Turn Dial to adjust image focus to make picture clear.

MULTIMEDIA CONNECTION

To connect to the USB drive select the source “Multimedia” or press the USB Button on the remote. Then navigate to the file type that you want (movie, photo, music or text) using the     directional keys. Select the file you would like to view by pressing the  Play / Pause button or the OK button on the remote or the  OK button on the projector.

AV VIDEO CONNECTION

Connect the 3-in-1 Cable (included) to the Video Input on the back of the projector.

Navigate to the AV Media Source and press either the OK OK Button on the Remote Control or the **OK** OK Button on the Projector.

HDMI CONNECTION

Connect an HDMI cable to the HDMI Input on the back of the projector. Navigate to the HDMI media source and press either the OK OK Button on the Remote Control or the **OK** OK Button on the Projector.

VGA CONNECTION

Connect a VGA cable to the VGA Input on the back of the Projector. Navigate to the VGA media source and press either the OK OK Button on the Remote Control or the **OK** OK Button on the Projector.

AUDIO CONNECTION

Connect a 3.5 mm jack cable to the 3.5 Output on the back of the projector.

SAFETY PRECAUTIONS

- Never use your projector near water or in areas where it can come into contact with water. Never handle the projector if it was dropped in water or any other liquid. If the product comes into contact with water while switched off, but still plugged in it is a safety hazard.
- Always make sure your hands are dry before touching the plug or power connections.
- Do not operate the product with a damaged cord or plug, or after it malfunctions, has been dropped, or damaged in any manner.
- The E-Luminate is intended for personal use only. Commercial use invalidates the warranty and the supplier cannot be held responsible for injury or damage caused when using the device for any other purpose than that which it was intended for.
- This projector is not intended for use by children, or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety. Extreme caution must be exercised.
- Children should be supervised to ensure that they do not play with the Projector. Packaging must never be left within reach of children, as it is potentially dangerous.
- Do not cover the vents of the projector as this may lead to excessive heating of the E-Luminate's components. Always leave a minimum distance of 10 cm around the unit to ensure sufficient ventilation.

CLEANING & CARE INSTRUCTIONS

- Before Cleaning: Ensure that your E-Luminate is not plugged into any device or power source before cleaning or maintaining it.
- Cleaning: Wipe down the surface of your E-Luminate using a soft, slightly damp cloth. To clean the lens, use a dry microfiber cloth and gently wipe until it is clean.
- Do not use any harsh or abrasive cleaning chemicals or materials on your E-Luminate as doing so may damage or scratch the surface finish or the lens.
- Do not expose your E-Luminate to direct sunlight or high temperatures for extended periods of time.
- Do not store in temperatures over 60° C.

ENVIRONMENTALLY FRIENDLY DISPOSAL



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

DISCLAIMER

All product and company names are trademarks™ or registered® trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

WARRANTY

This E-Luminate Series Projector comes with a standard 12 month limited warranty against manufacturing defects and faults. Should your E-Luminate projector be unboxed with any faulty parts, poor finishing or visible damage, or fail to perform due to a manufacturing defect or poor workmanship, please return it with your proof of purchase (till slip or invoice) to the store of purchase for an exchange, or repair, depending on the store's returns policy.

This warranty commences from the date of purchase.

Kindly retain your proof of purchase as well as the packaging for your warranty period.

NOTE:

The warranty does not apply to a product that:

- a.) Has failed due to excessive wear and tear beyond what is considered to be reasonable.
- b.) Has been misused or neglected.
- c.) Has been damaged accidentally or by acts of God including fire and flooding.
- d.) Has been used or operated contrary to operating or maintenance instructions outlined in this manual.

The Store of Purchase / Seller cannot accept any returned products that have not been returned in accordance to this warranty or which does not follow their own Returns Policy. Please refer to the Store of Purchase / Sellers Returns Policy for details.

Should you require any further assistance or have any questions on your warranty, please contact the store of purchase.

