




E-LUMINATE

Pulldown Projector Screen

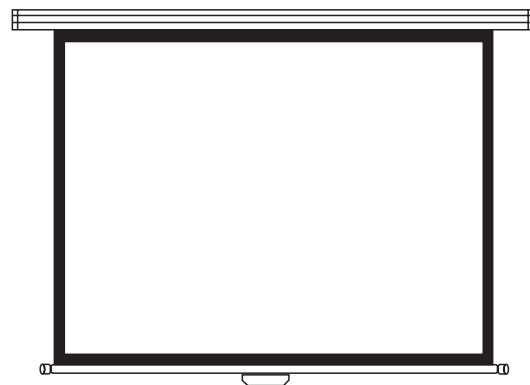

INSTRUCTION MANUAL

Please read and retain these instructions for future reference.

HIGHLIGHTS

- 100" Screen size
- 16:9 Aspect Ratio
- Self-lock System
- 0.4mm Thick Matt White Fabric

PACKAGE CONTENTS


- Connex E-Luminate Pulldown Projector Screen 100" - 16:9
- Instruction Manual

SPECIFICATIONS

- 64 Octagonal Housing Case
- Matt White Fabric
- Fabric Thickness: 0.4 mm
- Product Size: 2214 x 1245 mm (Open)
- Self-lock System
- Black Framed Screen

STRUCTURE

Wall-mounted Manual Screen

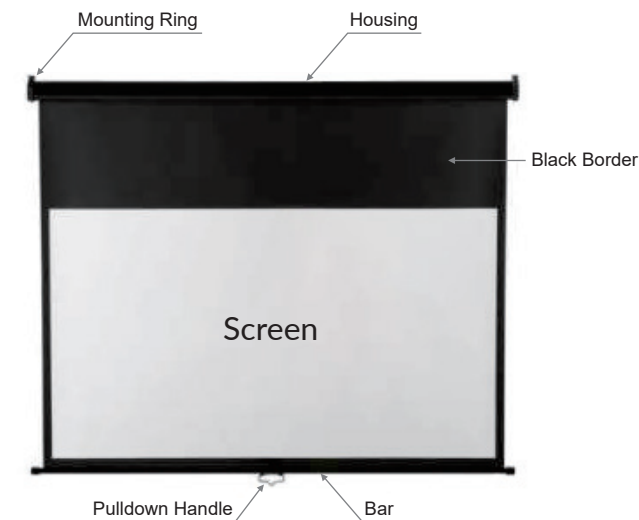

STRUCTURE

Moving parts on the drive unit must be installed higher than 2.5 m above the floor or other level that could provide access to it. Choose a suitable place for installing. The mounting rings are strong enough to hold more than 25 kg.

HOW TO USE

Lowering the screen:

Using the pulldown handle, lower the screen with a gentle even action until desired height is reached.

The screen will stop when it reaches its maximum.

DO NOT ATTEMPT TO FORCE THE SCREEN LOWER THAN THIS POINT.

The screen will retract slightly before locking in place.

Raising the screen:

Using the handle, pull down the screen a small way, then allow the screen to raise quickly.

Caution: Do not let go of the handle until the screen is fully retracted. Damage from retracting too rapidly can occur. Do not allow the bar to hit the screen housing when retracting.



CP200

CARE & MAINTENANCE

- The screen can not be folded. Do not use fingers or hard objects to touch the screen surface.
- Keep the screen far away from the high temperature objects or fire.
- After using put the screen back to the housing in order to avoid being damaged. If not in use, please remove the screen from the wall and pack it in a carton.

WARNING: Important safety instructions. It is important for the safety of persons to follow these instructions. Save these instructions.

- Do not allow children to play with.
- Frequently examine the installation for imbalance and signs of wear or damage to cables and springs.
- Do not use if repair or adjustment is necessary; it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This projector screen is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the projector screen by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the the projector screen.

CLEANING INSTRUCTIONS

- Cleaning: Wipe down the surface of your E-Luminate using a soft, slightly damp cloth. To clean the projector screen, use a dry microfiber cloth and gently wipe until it is clean.
- Do not use any harsh or abrasive cleaning chemicals or materials on your E-Luminate as doing so may damage or scratch the surface finish.
- Do not expose your E-Luminate to direct sunlight or high temperatures for extended periods of time.
- Do not store in temperatures over 60° C.

ENVIRONMENTALLY FRIENDLY DISPOSAL



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

DISCLAIMER

All product and company names are trademarks™ or registered® trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them.

WARRANTY

This Connex Projector Screen comes with a standard 12-month limited warranty against manufacturing defects and faults.

Should your Connex Projector Screen be unboxed with any faulty parts, poor finishing or visible damage, or fail to perform due to a manufacturing defect or poor workmanship, please return it with your proof of purchase (till slip or invoice) to the store of purchase for an exchange, or repair, depending on the store's returns policy.

This warranty commences from the date of purchase. Kindly retain your proof of purchase as well as the packaging for your warranty period.

NOTE:

The warranty does not apply to a product that:

- a.) Has failed due to excessive wear and tear beyond what is considered to be reasonable.
- b.) Has been misused or neglected.
- c.) Has been damaged accidentally or by Force Majeure including fire and flooding.
- d.) Has been used or operated contrary to operating or maintenance instructions outlined in this manual.

The Store of Purchase / Seller cannot accept any returned products that have not been returned in accordance with this warranty or which does not follow their own Returns Policy. Please refer to the Store of Purchase / Sellers Returns Policy for details.