 




E-LUMINATE

Electric Projector Screen

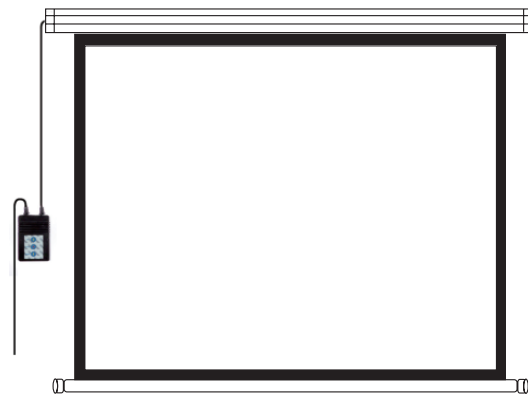

INSTRUCTION MANUAL

Please read and retain these instructions for future reference.

HIGHLIGHTS

- 100" Screen Size
- Electronic Motor
- Wired Remote Control
- Matt White Fabric

 
PACKAGE CONTENTS

- Connex E-Luminate Electric Projector screen with Remote 100" - 16:9
- Instruction Manual

SPECIFICATIONS

- 64 Octagonal Housing Case
- Matt White Fabric
- Fabric Thickness: 0.4mm
- Electronic Motor: 220-240v AC
- Wired Remote Control
- Black Framed screen
- Screen Size: 2214 x 1245 mm (Open)


ELECTRIC SCREEN

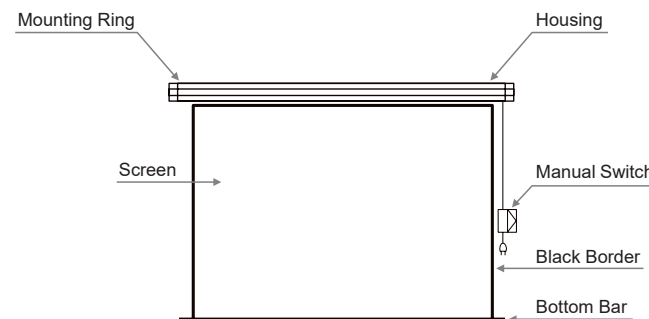

Motorized Screen with Manual Switch.


ADJUST LIMIT SWITCH

 Adjust position for the two limits, refer to below picture:

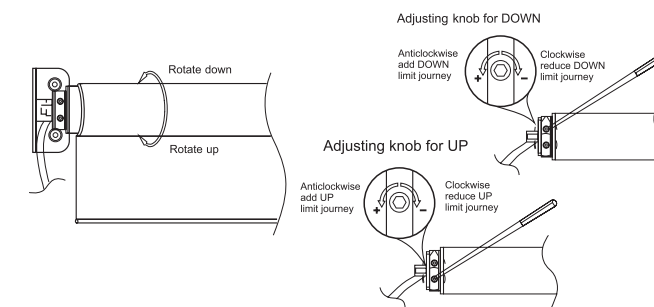

HOW TO USE

 
- The screen should be plugged to a suitable power supply. It can be 220 v / 50 hz, 230 v / 50 hz, or 110 v / 60 hz, 120 v / 60 hz.
- Unpack the screen carefully, be sure the screen is in good condition, check all the accessories are packed inside the carton.
- It is suggested only to use the screens indoor under normal temperature and humidity.
- Refer to the below fig and fix the screen to the wall or to the ceiling.

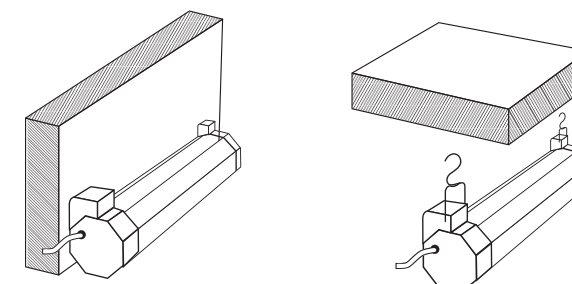

Fix the screen to the wall.

Fix the screen to the ceiling.

 - Plug in the power supply. Press the down button, the screen will go down smoothly. Press the stop button when the screen goes down to the expected position, otherwise the screen will stop at the lower limited position automatically.

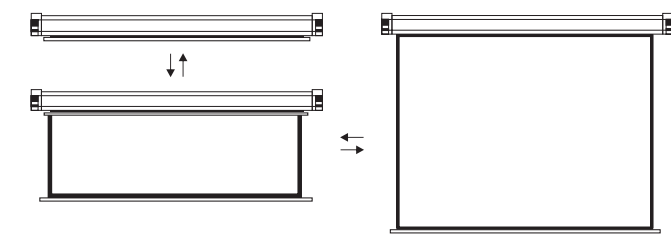

- Press the up button, the screen will go up smoothly. Press the stop button when the screen goes up to the expected position, otherwise the screen will roll back to the housing.
- Moving parts of the drive must be installed higher than 2.5 m above the floor or other level that could provide access to it.



CP203

CARE & MAINTENANCE

- The screen can not be folded. Do not use fingers or hard objects to touch the screen surface.
- Keep the screen far away from the high temperature objects or fire.
- After using put the screen back to the housing in order to avoid being damaged. If not in use, please remove the screen from the wall and pack it in a carton.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING: Important safety instructions. It is important for the safety of persons to follow these instructions. Save these instructions.

- Do not allow children to play with fixed controls, keep remote controls away from children.
- Frequently examine the installation for imbalance and signs of wear or damage to cables and springs.
- Do not use if repair or adjustment is necessary; if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This projector screen is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the projector screen by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the projector screen.

CLEANING INSTRUCTIONS

- Before Cleaning: Ensure that your E-Luminate is not plugged into any device or power source before cleaning or maintaining it.
- Cleaning: Wipe down the surface of your E-Luminate using a soft, slightly damp cloth. To clean the projector screen, use a dry microfiber cloth and gently wipe until it is clean.
- Do not use any harsh or abrasive cleaning chemicals or materials on your E-Luminate as doing so may damage or scratch the surface finish.
- Do not expose your E-Luminate to direct sunlight or high temperatures for extended periods of time.
- Do not store in temperatures over 60° C.

ENVIRONMENTALLY FRIENDLY DISPOSAL



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

DISCLAIMER

All product and company names are trademarks™ or registered® trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them.

WARRANTY

This Connex Projector Screen comes with a standard 12-month limited warranty against manufacturing defects and faults.

Should your Connex Projector Screen be unboxed with any faulty parts, poor finishing or visible damage, or fail to perform due to a manufacturing defect or poor workmanship, please return it with your proof of purchase (till slip or invoice) to the store of purchase for an exchange, or repair, depending on the store's returns policy.

This warranty commences from the date of purchase. Kindly retain your proof of purchase as well as the packaging for your warranty period.

NOTE:

The warranty does not apply to a product that:

- a.) Has failed due to excessive wear and tear beyond what is considered to be reasonable.
- b.) Has been misused or neglected.
- c.) Has been damaged accidentally or by Force Majeure including fire and flooding.
- d.) Has been used or operated contrary to operating or maintenance instructions outlined in this manual.

The Store of Purchase / Seller cannot accept any returned products that have not been returned in accordance with this warranty or which does not follow their own Returns Policy. Please refer to the Store of Purchase / Sellers Returns Policy for details.