



10.1" Tablet ARM Octa Core
Android™ 11 (Go edition)



USER MANUAL

PLEASE READ AND RETAIN THESE INSTRUCTIONS
FOR FUTURE REFERENCE

SEN-1055-ARM



V1.1

SAFETY PRECAUTIONS


1. Please note that this is an advanced technological device with sensitive components. Avoid dropping the tablet. Avoid rough handling to prevent damage.
2. To avoid short circuiting your device, do not allow it to come into contact with metal objects.
To avoid losing important data, we recommend backing up your device regularly, especially before you upgrade the firmware or install new applications. The manufacturer and / or distributor do not take responsibility for loss of data while using this device.
3. Do not disassemble.
4. Do not wipe the surface of the unit with alcohol, thinner or benzene, as this may damage the finish or screen of the unit.
5. Do not disconnect the unit while it is formatting or uploading / downloading, as this may lead to software errors.
6. Please operate this device strictly as per the user guide.
7. Do not allow your tablet to come into contact with water or insert foreign objects into the unit.
8. Do not use the unit in places that are extremely hot, cold, dusty, or humid.
9. Specifications are subject to change and improvement without notice.



Note:

The pictures in the manual are for reference only. The design and the specification of the unit are subject to change without notice.

DESCRIPTION OF PARTS

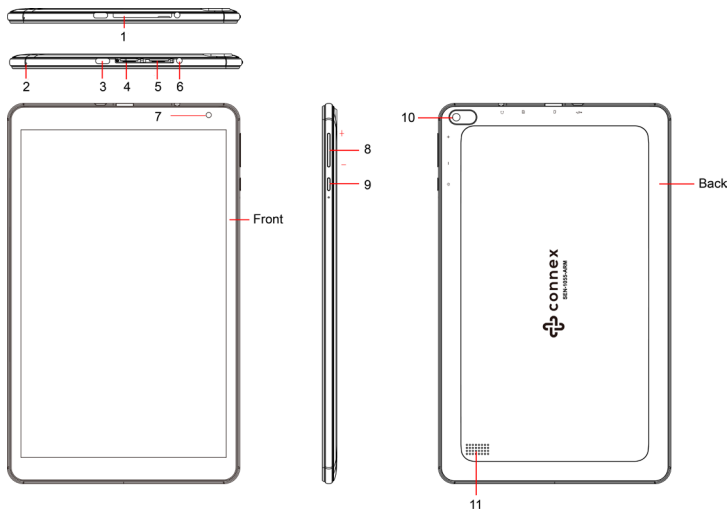

OPERATION INSTRUCTIONS

1. Basic Operation

1.1. SIM card installation

Place the tablet on a flat surface. Ensure the tablet is switched off, insert the SIM card into the SIM card slot in the direction indicated.

1.2. Power on/Power off

Power on:

Press and hold the power switch for 2 seconds; the unit displays the start-up logo and enters the home screen mode after a short time.

Power off:

Press and hold the power switch for 2 seconds to turn the unit off.

Reset: While the device is on hold the 'power' and 'volume up' buttons for 7 seconds at the same time to restart the device.

Sleep Mode:



While the device is on, briefly pressing the power switch will enter into Sleep Mode and your screen will turn off. Any applications you had running, will continue to run in the background. Resume use by briefly pressing the power button again. You may use this function when not using the device for a short time, to save power.

1.3. Charging

When the device prompts low battery, please charge it using the provided charger and USB cable.


1.4. Main Menu

On the Home Screen, swipe up from the Bottom of the screen to open the main menu where all your installed applications will be displayed. Swiping down will display additional applications. Applications include the system settings, music player, video player, web browser and many other applications which were installed on your tablet, including any new applications you have installed from the Play Store.

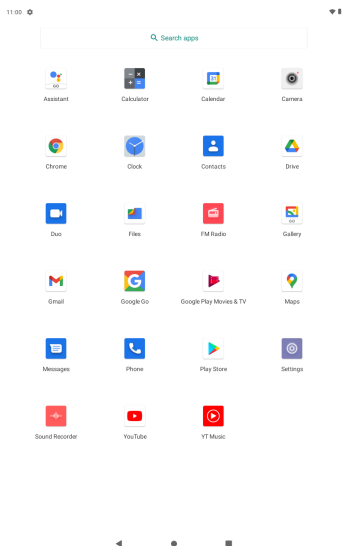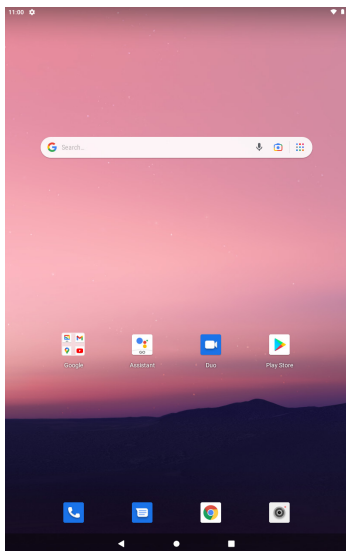


2 Settings

Tap the  Icon in the Main Menu to enter the Settings Menu. Tap the corresponding setting icon to change settings, or to customize the device to your personal preferences.

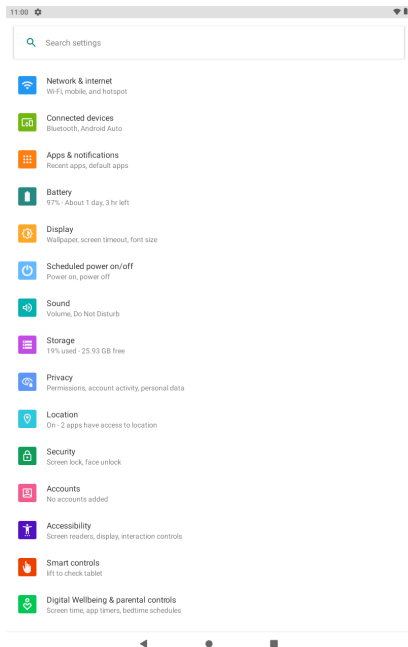


2.1 Date and Time Settings

Tap the “Date & Time” icon in the setting menu to set the date and time. You may set the date, time zone, time, time format and date format etc. in the menu.

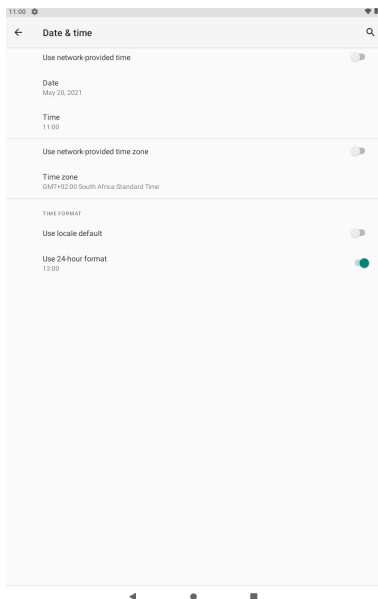

2.2 Brightness

Select “Display” in the setting menu. Tap “Brightness” to enter the menu and slide the bar to adjust the brightness. A lower brightness setting will allow a slightly longer battery usage time.

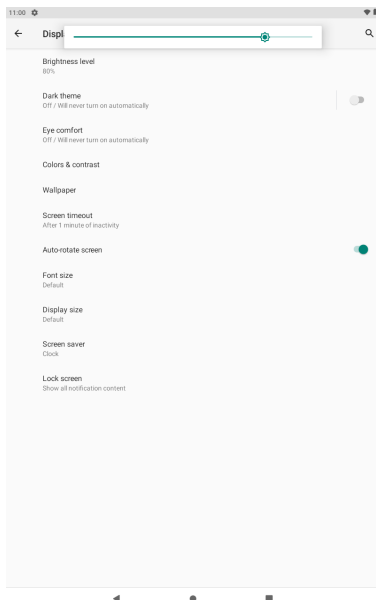


3. Wi-Fi Connection

Tap “Settings” in the main menu and tap “Wireless & network” to enter the wireless and network settings menu. Tap Wi-Fi to turn on the Wi-Fi.

Select “Wi-Fi preferences” to set and manage wireless connections.


Tap “Wi-Fi” to display the list of nearby available Wi-Fi networks. Tap the name of the network you wish to connect to, and the setting window will display. Connect to the Wi-Fi network of your choosing by following the prompts on screen. You may be asked to input a username and password if the networks are encrypted or protected.

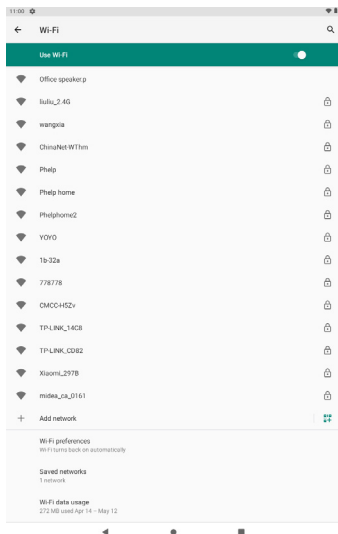

4. Bluetooth

Turn on Bluetooth, Tap on Bluetooth settings to set and manage Bluetooth Device access. Tap “search for devices”.

A list of available nearby Bluetooth devices will show. Tap the name of the device you wish to pair with. Select device pairing using any pairing code which was supplied with the Bluetooth device. After a few seconds, the tablet will notify you that the devices are paired. You can now transfer pictures, movies, music etc. with the Bluetooth device.

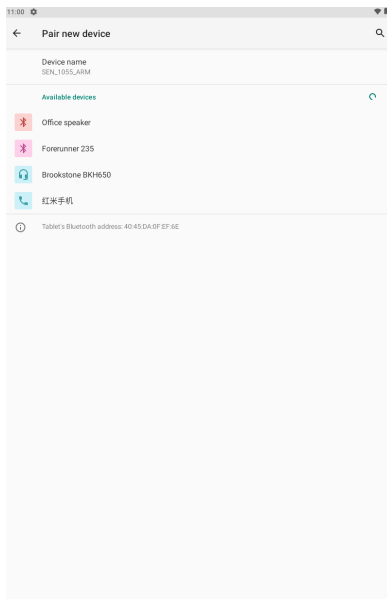

5. Install, Uninstall and Run Applications

5.1 Install

There are many ways to install applications under Android. The recommended method being the Android Play Store. To access the Play Store, simply tap the Play Store icon and then search for your selected application and follow the prompts to install it.



Note:

You can also install programs using the OTG function of the tablet, but the manufacturer / distributor of this tablet accepts no responsibility for software errors using this method.

5. Install, Uninstall and Run Applications

5.2 Uninstall

To uninstall an application, navigate to the Application Manager under Settings and select the application you wish to uninstall. menu on the uninstall button to uninstall the application.

6. Browsing the internet


6.1. Ensure you are connected to the network via either Wi-Fi or 3G/4G and select the Browser application. When the browser opens, type the web address of the site you want to visit, and the browser will navigate to that site.

- 6.2. Tap on the  icon to open Google Chrome.
Tap on the search bar to type in your search and press enter to begin the search.
Tap the  icon to open the browser menu
- 6.3 Tap the  icon to bookmark the web page that you are on to save it to a collection.
Tap the bookmark icon again to change bookmark settings.

7. Audio and Video Playback


7.1. Audio Playback

Select the Music application in the main menu to enter the audio playback menu. It will list all the audio files in the device, and you may tap the file name to play it. In the audio playing menu, tap the relevant icons to PLAY / PAUSE, etc.

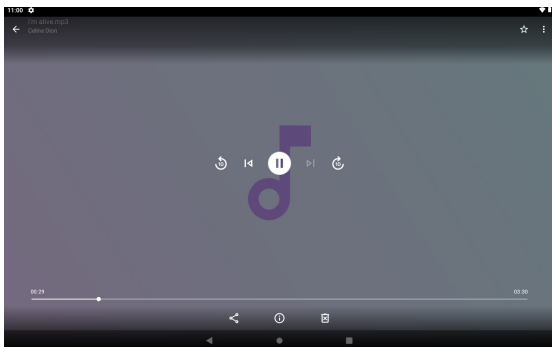

7.2. Video Playback


Tap the Gallery application in the main menu to view a list of all your photos and videos. Tap on the file name or thumbnail to view it. While the video is playing, touch the screen to open the playback icons and select the relevant icon to Play / Pause / Adjust Volume / Skip files, etc

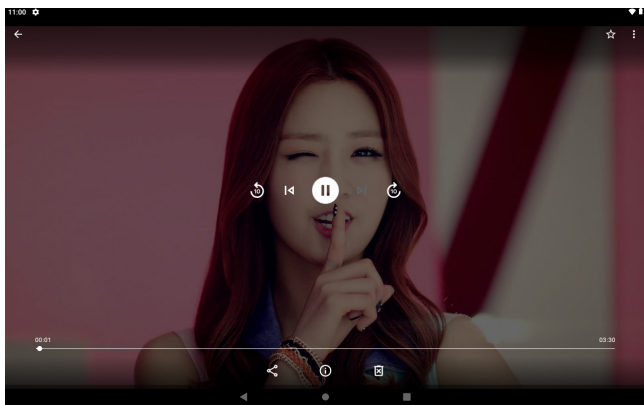

Gallery Go

Gallery Go is a light, fast, and offline gallery optimized for your phone. Your photos will look great with one-tap editing, and easily find that photo with automatic organization.

Touch the screen to open the operation icons while viewing the picture to Zoom in / Zoom out / Skip to next picture / Delete the picture, etc.

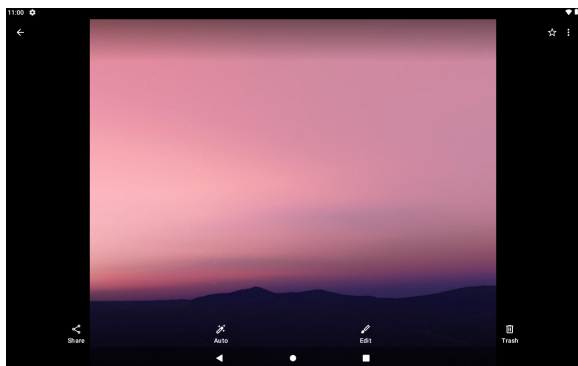

9. Camera


Tap the  icon in the main menu to open the Camera.

9.1 Photos

Tap the  icon to take a picture.

Tap the  icon to access the camera settings such as the Scene Mode, Picture Size, Picture Quality, and Colour Effect.

Tap the  icon to switch between the back and front cameras.

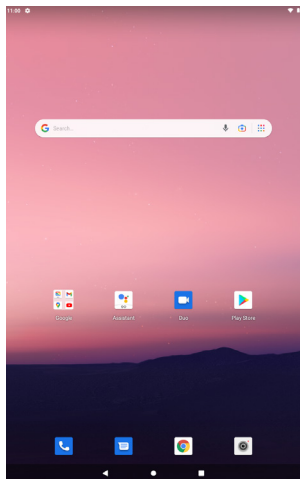

9.2 Video

Tap “Video” to access the video recorder.

Tap the  icon to start recording a video.

Tap the  icon to access the video settings.

10. Calling

To use this Tablet to make calls, please ensure that you have a valid SIM card installed with available airtime.

10.1 Phone

Place the Tablet on a flat surface. Ensure the Tablet is switched off, open the bottom shell, insert the SIM card into the SIM card slot in the direction indicated.

Turn on the device. The  3G/4G network signal icon will show after entering the system.

Tap  icon to enter the “phone” function.

There are 3 options:

1. Phone: Enter the phone number you wish to call and then Tap the  icon to dial.
2. Call log: Check the call history in the call list and dial the number again.
3. Contacts: Tap the name of the contact to dial.

10.2 Contacts

Tap the  icon to enter the Contacts function.

Tap the  icon to add a contact information, tap “Save” to save the contact.

To edit a contact, select the contact, tap the “Edit Contact” icon.

To delete or share a contact, tap the  icon.

10.3 Messaging

Tap the  icon to open Messages, Tap the “Start chat” icon to create a new message, Tap the  icon to enter the settings menu. You may make the corresponding selections based on your requirements.

10.4 3G/4G Data Network

To use the tablet for 3G / 4G Data, please ensure that you have a valid SIM card installed with available Data. Place the tablet on a flat surface. Ensure the tablet is switched off, open the SIM / SD card tray, insert the SIM card into the SIM card slot in the direction indicated. The  3G/4G network signal icon will be displayed on the top of your screen after entering the system. Since you can only choose either 2G / 3G / 4G or Wi-Fi, you must turn off Wi-Fi first. Select Settings > Wireless & Networks > Mobile networks to setup your 3G / 4G.

11. Connecting to an External Device


11.1. Connect with PC

Connect the device to a computer via the USB cable. Your computer will detect the tablet and you will be able to browse your files in the My Computer menu of your computer.

11.2. Using an OTG or SD Card

This tablet supports a removable device with FAT32 format, such as a USB flash drive. Connect the USB flash drive to the tablet using the supplied OTG cable.


Your tablet will recognize the USB flash drive and a menu will open allowing you to browse the files on the USB flash drive.

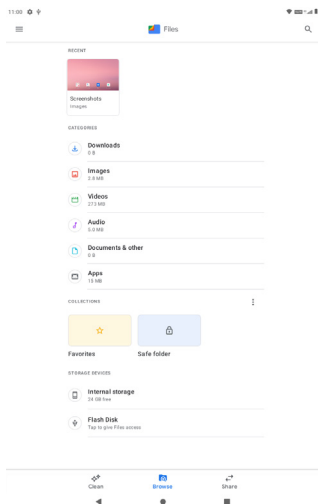

The OTG function will also allow connection of a USB mouse or keyboard to the tablet. Your Connex SEN-1055-ARM tablet can support an additional Micro SD card with a capacity up to 64GB. To insert the card, please first ensure the tablet is switched off and on a flat surface. Open the rear casing and insert the Micro SD card into the slot as indicated. When turning on the tablet after insertion of the Micro SD card, the tablet will recognize it and it will be available for use. To view what is on the Micro SD card, you can use the File Manager application.

12. GPS

Tap Settings in the main menu and Tap Location to enter the Location Access Setting menu. Allow the tablet to use the GPS for Location Services.

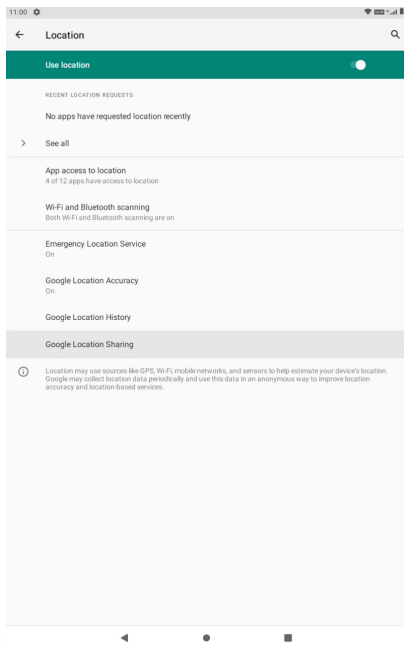

SPECIFICATIONS

- Operating System: Android 11 (Go edition)
- Processor: SC9863A Arm Cortex-A55 Octa core 1.6 GHz,
- GPU: IMG8322
- Flash: 32 GB
- Memory: DDR 2 GB
- TF Card Slot: Micro SD Card (Max: 128 GB)
- Screen: 10.1" 16:9 800 X 1280 IPS 10-point touch capacitive screen
- Languages supported: Chinese, English, Japanese, Cestina, Dansk, Deutsch, English, Espanol, Francais, Italiano, Nederlands, Norsk, Bokmal, Polski, Portugues, Svenska, Turkce, Errnvlka, Pyccknn, etc
- Input Method: Google Pinyin input method, soft keyboard, handwriting input
- Supported Audio Formats: MP3, WMA, MP3, OGG, AAC, M4A, MA4, FLAC, APE, 3GP, WAV
- Input: Microphone
- Output: Built-in single speaker, 8 Ω / 1 W x 1
- Supported Video Formats: AVI(H.264, DIVX, DIVX, XVID, RM, RMVB, MKV(H.264, DIVX, DIVX, XVID), WMV, MOV, MP4) H.264, MPEG, DIVX, XVID), MPEG, MPG, FLV (H.263, H.264)
- Video Source: Supports 30 FPS full 1080p HD format video playback
- Supported Image Formats: JPG, JPEG, GIF, BMP, PNG
- Supported E-book Formats: TXT, EPUB, PDF, WORD, EXCEL, POWERPOINT, LRC, HTML, HTM, EPUG, FB2
- Camera: Front: 0.3 MP, Rear: 2 MP. Supports Photo, Video and Panoramic Modes

- Power Supply: Travel charger, INPUT: AC 100 - 240 V
OUTPUT: DC 5 V / 2 A
- Battery: Lithium Battery, 5000 mA, 3.7 V
- GPS Receiver: Supports 3D Map
- Software: Software: Browser, Flash (10.3), APK, install tools, Instant messaging, Online communication, Email, Media player, PDF viewer, Games, Picture and Image sharing, Map, Calculator.
- Support frequency band: GMS/850/900/1800/2100
3G WCDMA/900/2100 /4G/FDD-
LTE: B1/B3/TDD-LTE:B40
- WiFi: 802.11b/g/n
- Bluetooth Range: $\leq 10\text{m}$, Bluetooth 4.0
- Ports: Type-C, OTG supported
- Headphone: 3.5 mm stereo headphone
- Microphone: High-definition voice recording
- Buttons: Power On / Off, Volume+, Volume-
- G-Sensor: Mode 3-Axis / 4 directions
- Working Temperature: 0 - 45 ° C
- Storage Temperature: -20 - 55 ° C
- Humidity: 20 - 90% RH (Temperature must not exceed 65 °C when the humidity has reached 90% RH)
- Weight: 585g
- Dimensions: 252 x 154 x 9.6 mm

SAFETY INSTRUCTIONS

Product Servicing:

Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel. Unplug this product from the wall outlet and refer servicing to qualified service personnel when:

The power cord or plug is damaged, cut or frayed.

Liquid was spilled into the product.

The product was exposed to rain or water.

The product has been dropped or the case has been damaged.

ENVIRONMENTALLY FRIENDLY DISPOSAL



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and wellbeing.